

Installing a Post Processor in CAMWorks – Setting up your Machine

1. Unzip/Extract the folder to access your post processor files.



2. Open your CAMWorks Post folder located here on a 64 bit system:

C:\CAMWorksData\CAMWorks2014x64\Posts

3. Drop all of the post files from your extracted folder into the designated post folder.





4. Open your machine definition window within CAMWorks:



5. Choose the Post Processor tab and select your machines post processor from the list. Be sure to choose Select when finished.

chine Machine Tool Crib F	PostProcessor	Posting	Setup	Rotary Axis	Tilt Axis	
Active post process C:\CAMWorksData Available C:\CAMWorksData DRIEAZ_MPR	sor : a\CAMWorks201 a\CAMWorks201	4x64\Pos 4x64\Pos	ts\HAAS	S.ctl		Choose select to show your machine as Active.
M3AXIS-TUTORIA M4AXIS-TUTORIA M5AXIS-TUTORIA MPR	L L L			Select	АР	T CL
Parameter	Va	lue				