



Eureka License Server Installation and Configuration

Software Requirements


1. Windows 7 or later with Microsoft.NET Framework 4.5.
2. Network connection.
3. The computer that the Eureka License Server is installed on must be able to reach: <http://support2.roboris.com>.
 - a. The Eureka License Server authenticates with the above address every 30 days.
 - b. If the Eureka License Server cannot reach the Eureka Server, the Eureka License Server will lock. If this occurs, contact Eureka at *licensing@roboris.com*

If Behind a Firewall


1. You will need to configure the firewall to accept incoming and outgoing connections with the Eureka License Server's port.

Installing the Eureka License Server


1. Open

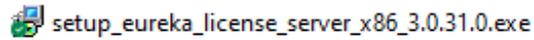


2. Allow app to make changes to your device

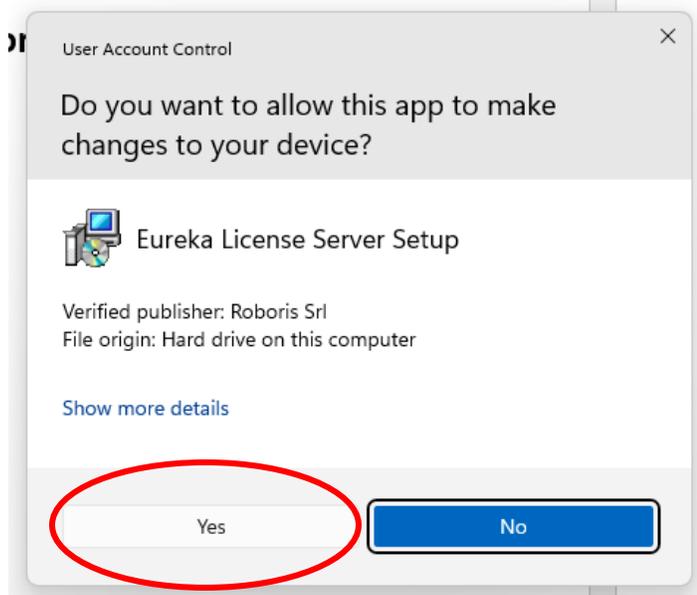


3. To select language, click the drop-down arrow and select a language

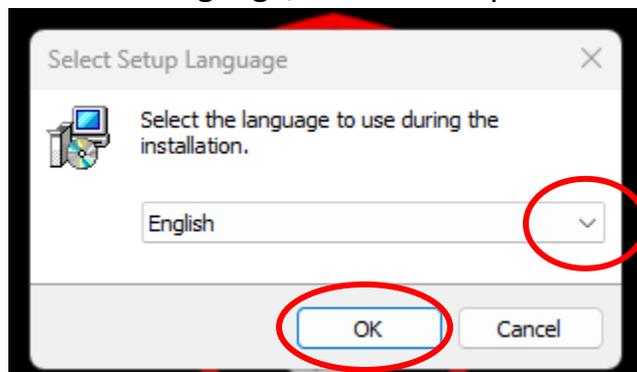


4. Click install.

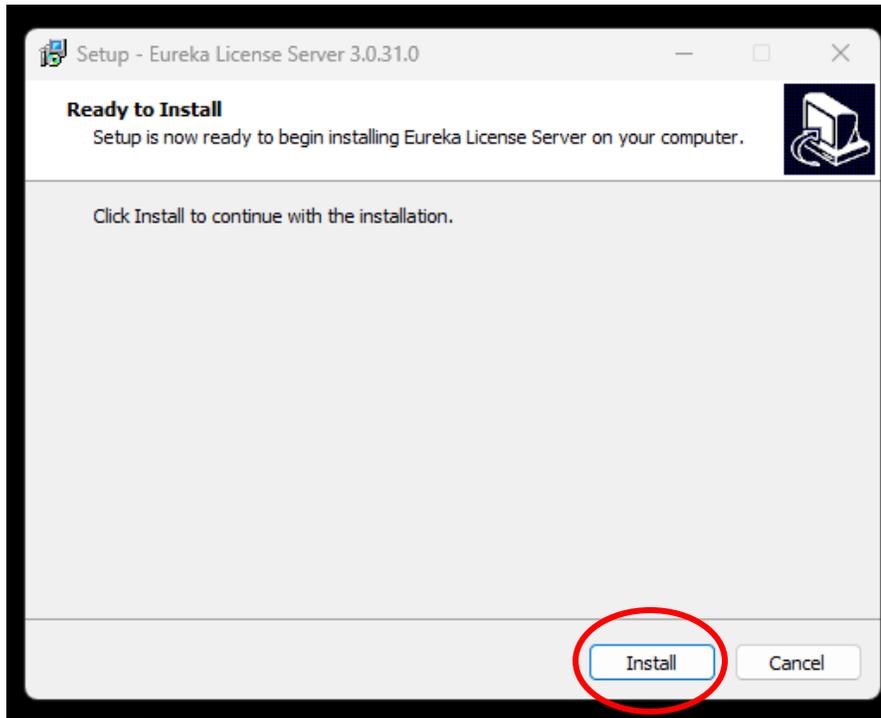

5. If prompted, select automatically close the applications and select next

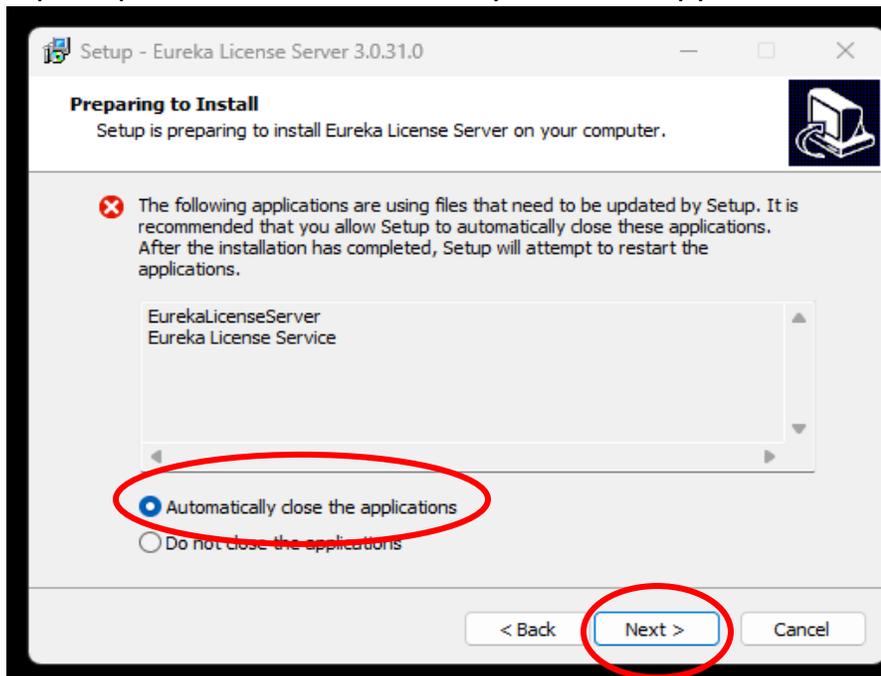


6. Click finish.

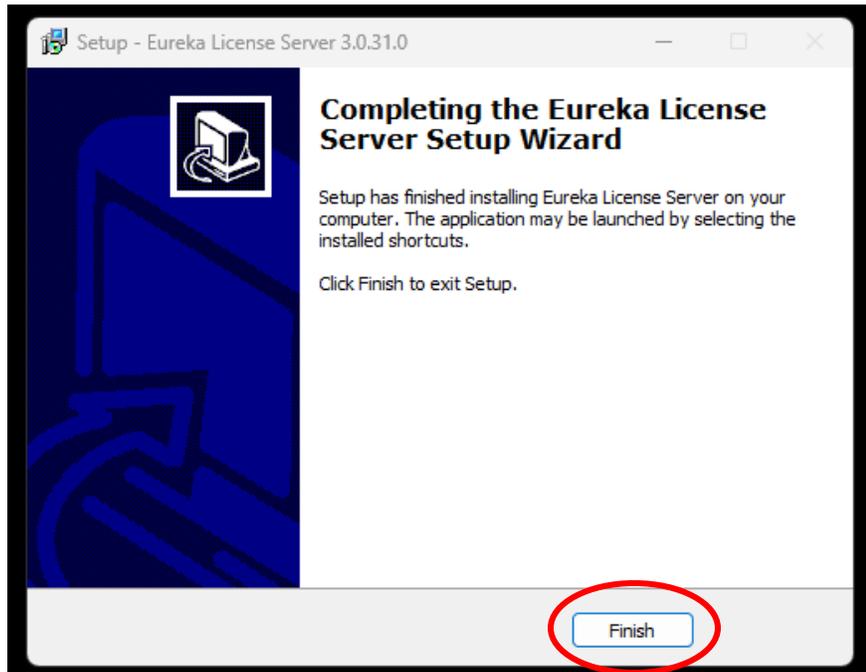


Configuring the Eureka License Server


1. Open the Eureka License Server application.

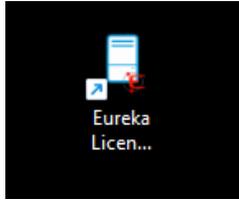


2. Click stop.

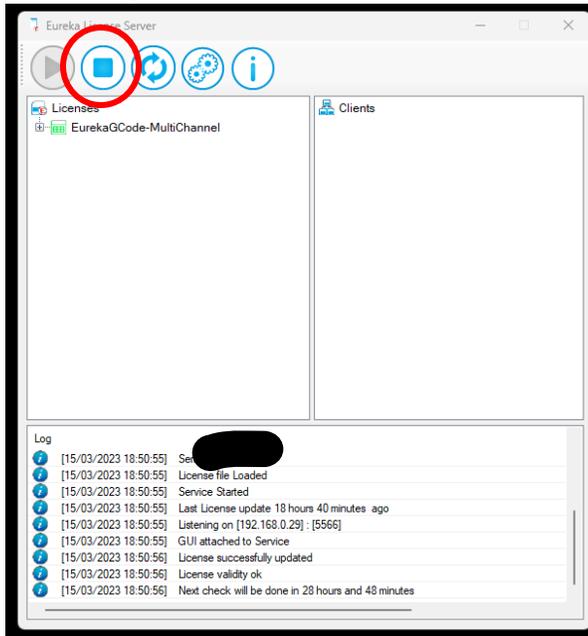


3. Open the Configuration window.

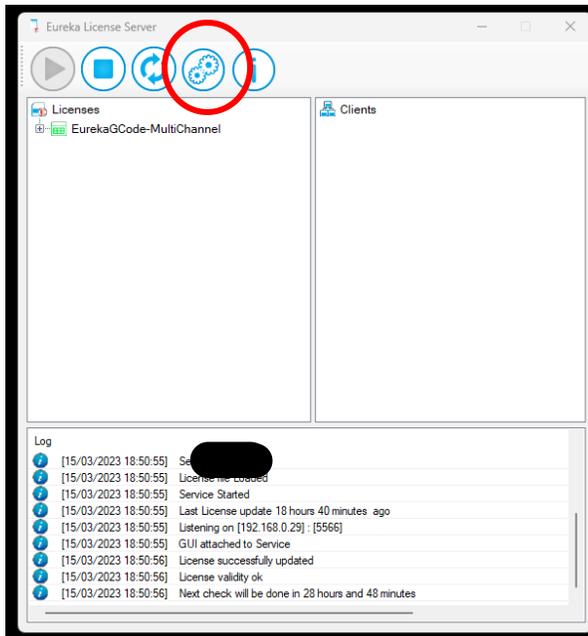


4. Use the drop-down arrow to select the language.

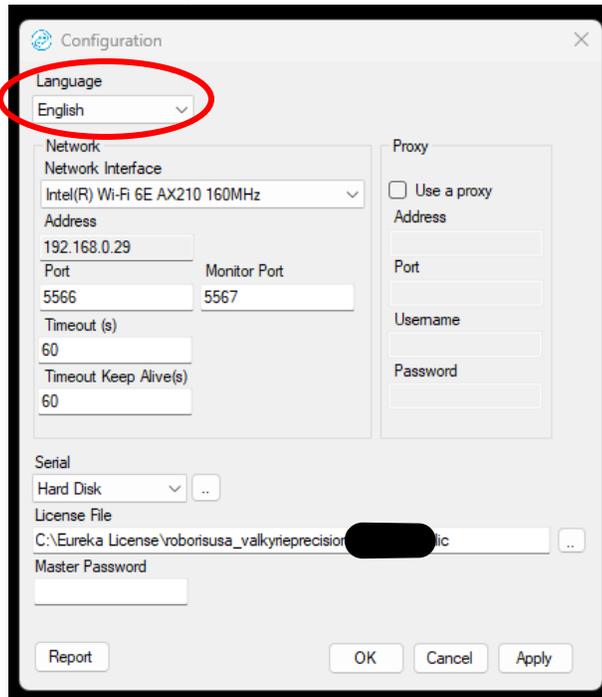


5. Select Network Interface from the drop-down menu-This is where the service will listen for incoming requests.

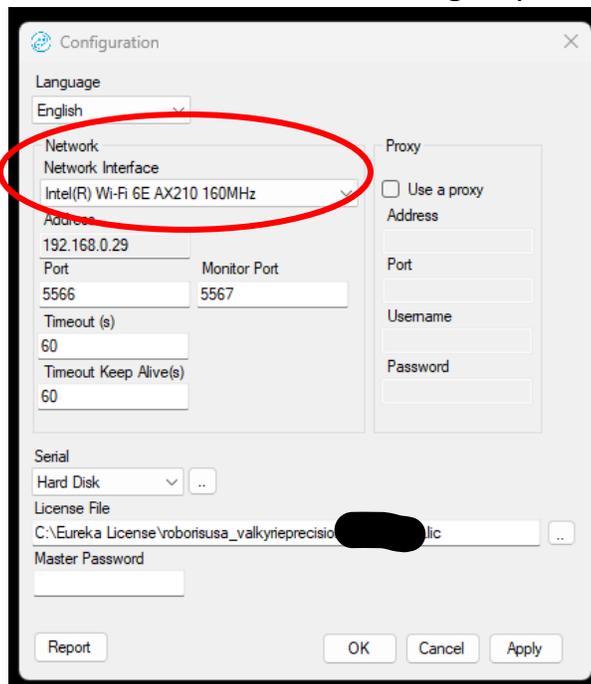


6. Address is automatically detected.

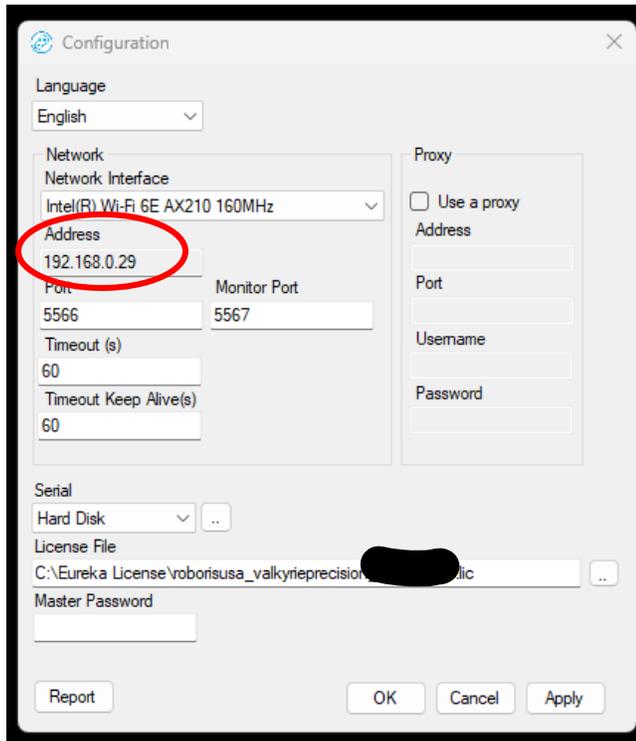


7. Set Port and Monitor Port (Default values are shown). You can change them.

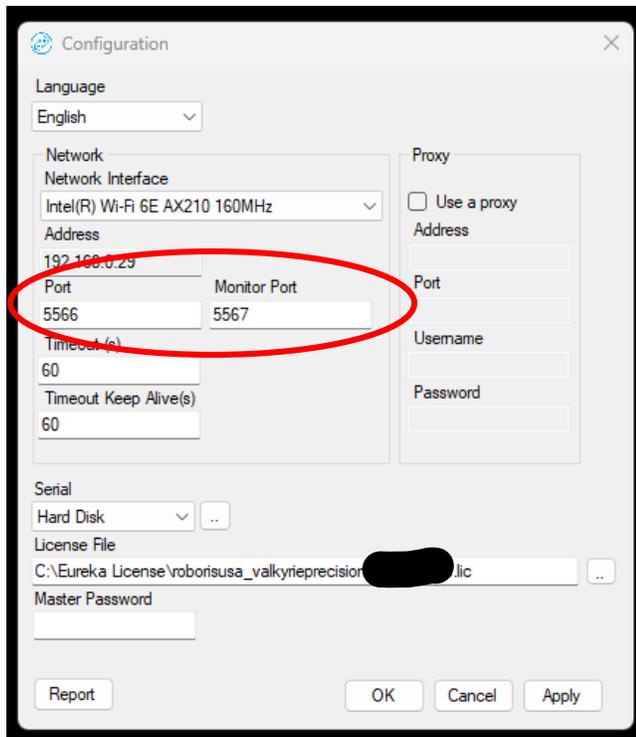


8. Set Timeout (s) and Timeout Keep Alive (s). Defaults are shown, you can change them.

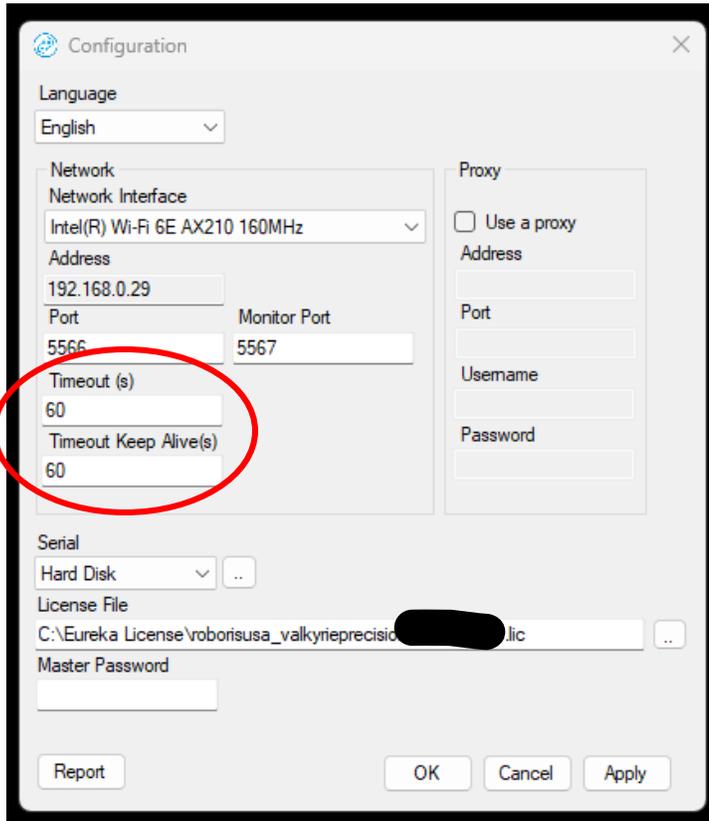


9. Set Serial from the drop-down menu. Choose the type associated with your license of Eureka.

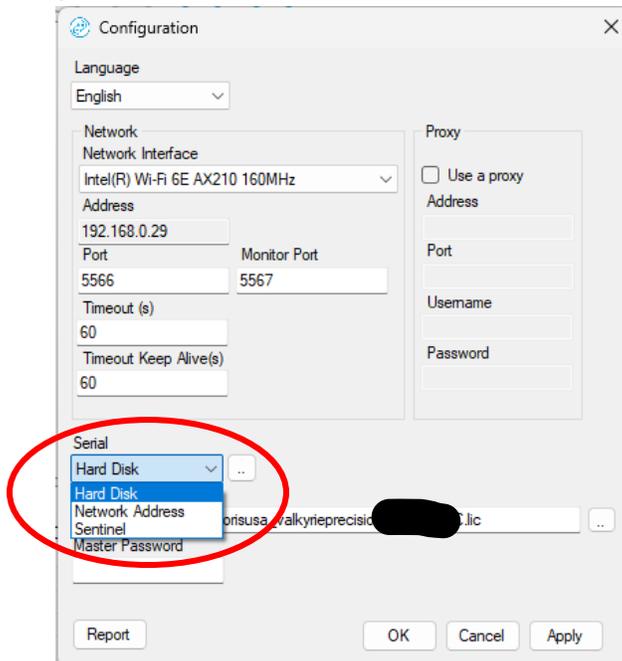


10. Select Use proxy and fill in the address, port, username, and password if your system is behind a proxy.

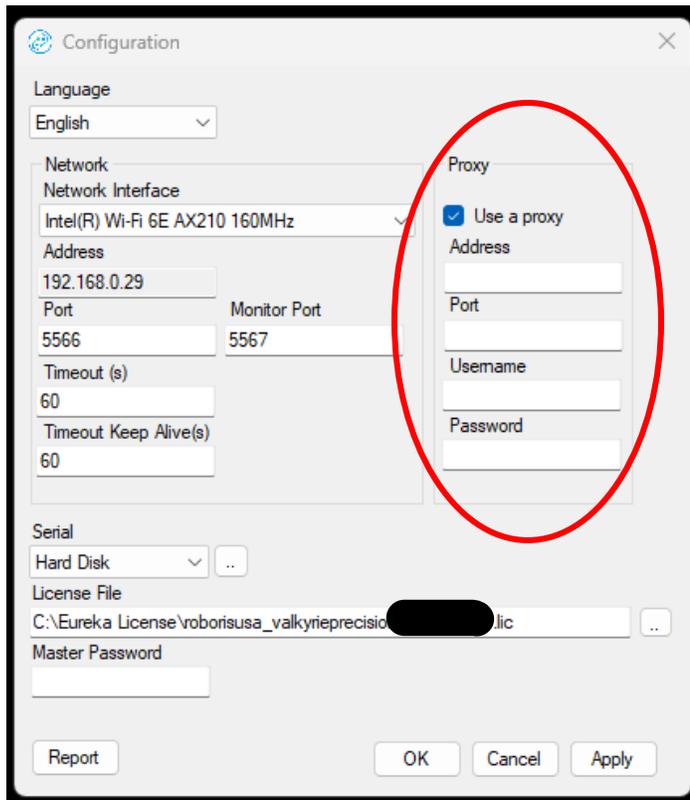


11. Select the path to the License File. Eureka recommends that you create a folder on the C drive called Eureka License.

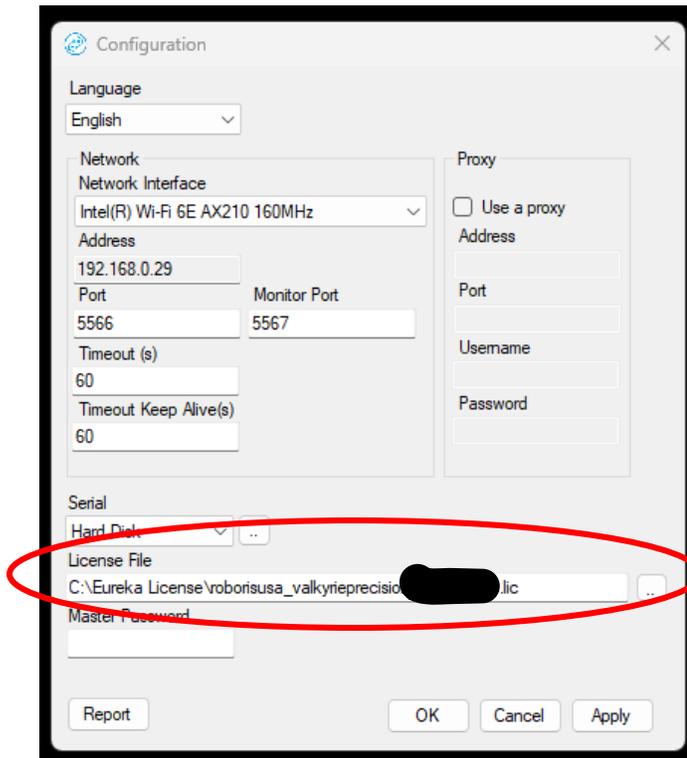


12. Click Apply.

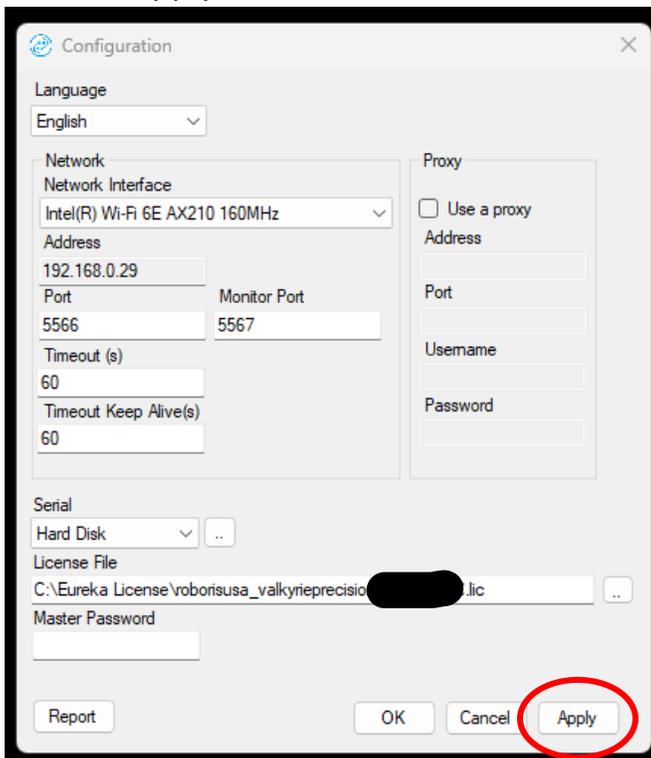


13. Click OK in the dialog box that pops

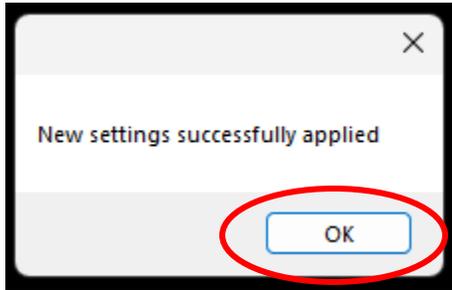


14. Click OK in the Configuration dialog box

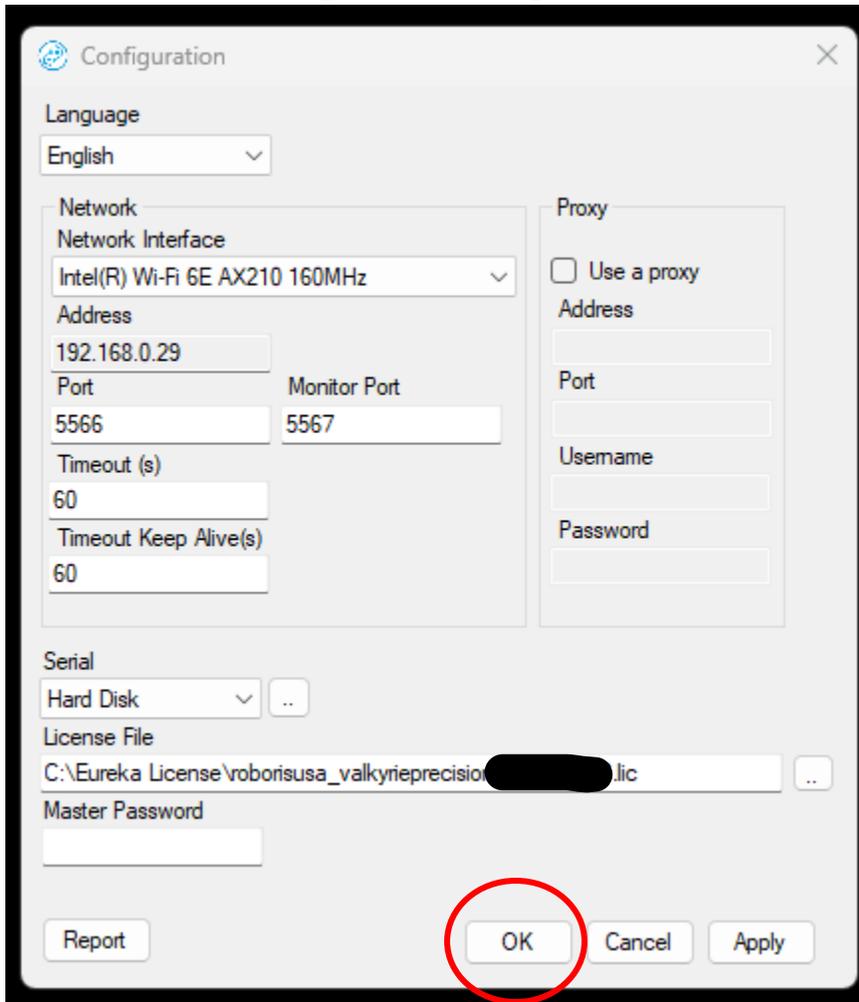


15. Click OK in the dialog box that pops up.

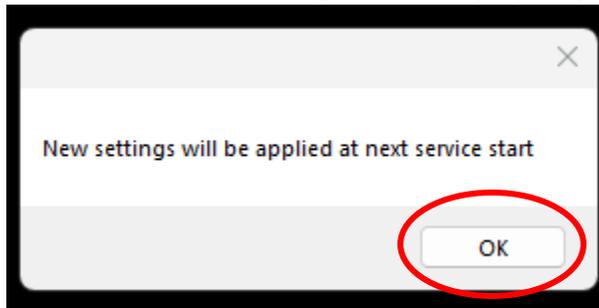

16. Click Start and minimize the License Server. As long as the License Server is running, you will be able to run Eureka. If Eureka cannot find a license on start up, make sure the License Server is running.

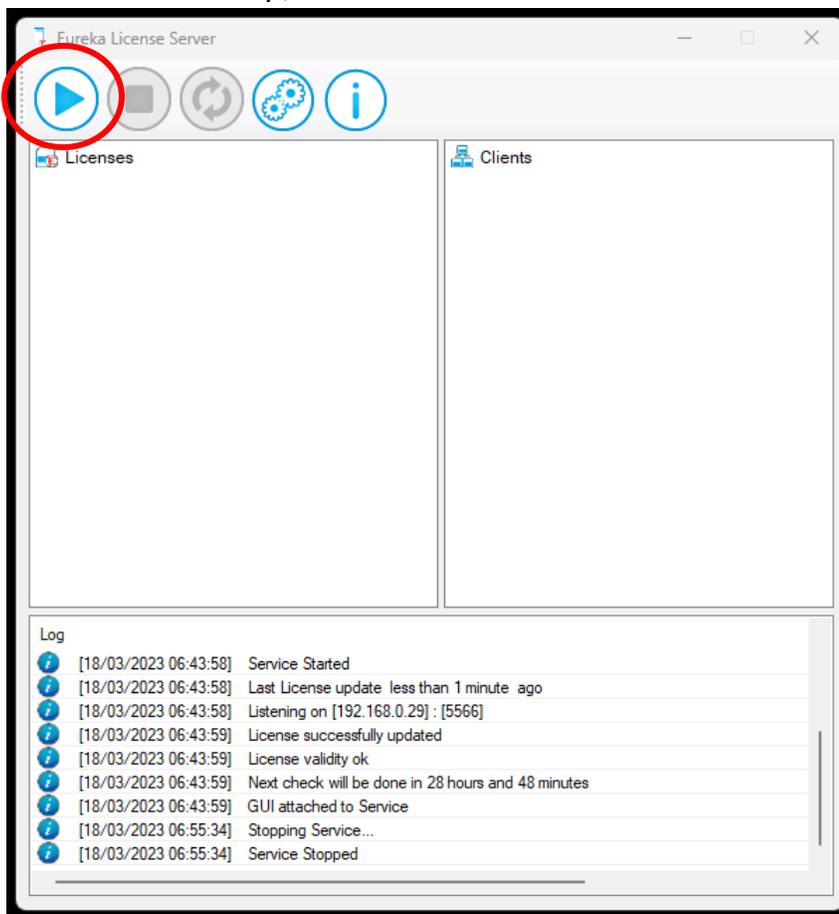


17. What the Eureka License Server should look like when it is running.

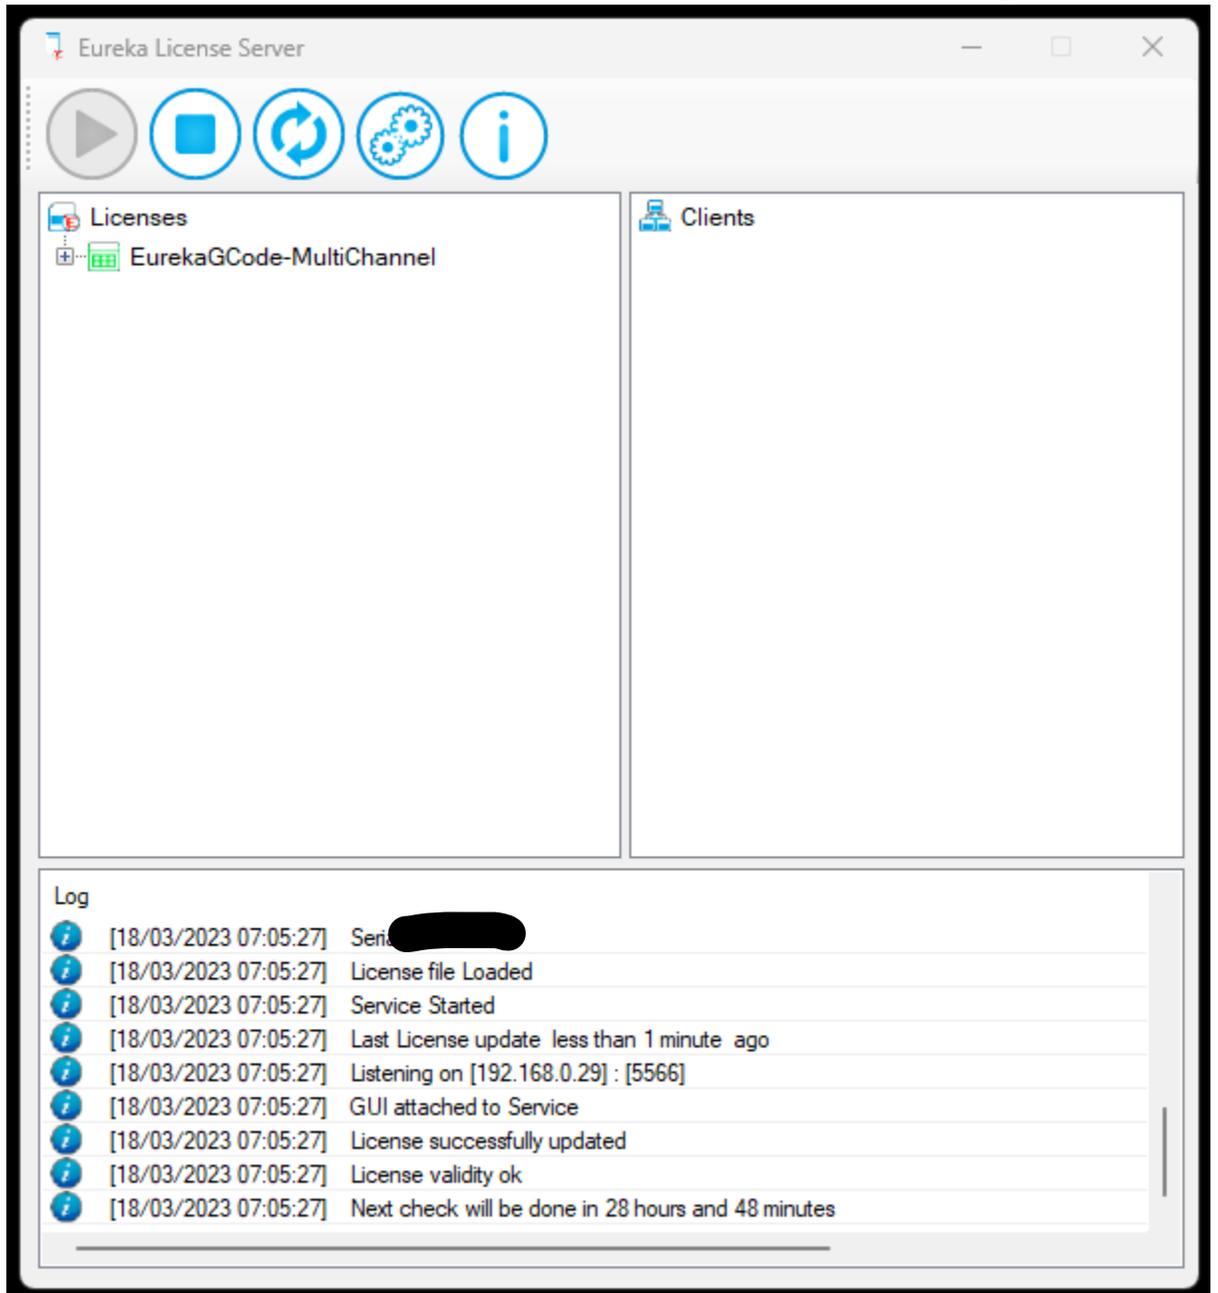


License Upgrade


1. Stop the Eureka License Server by clicking the stop button

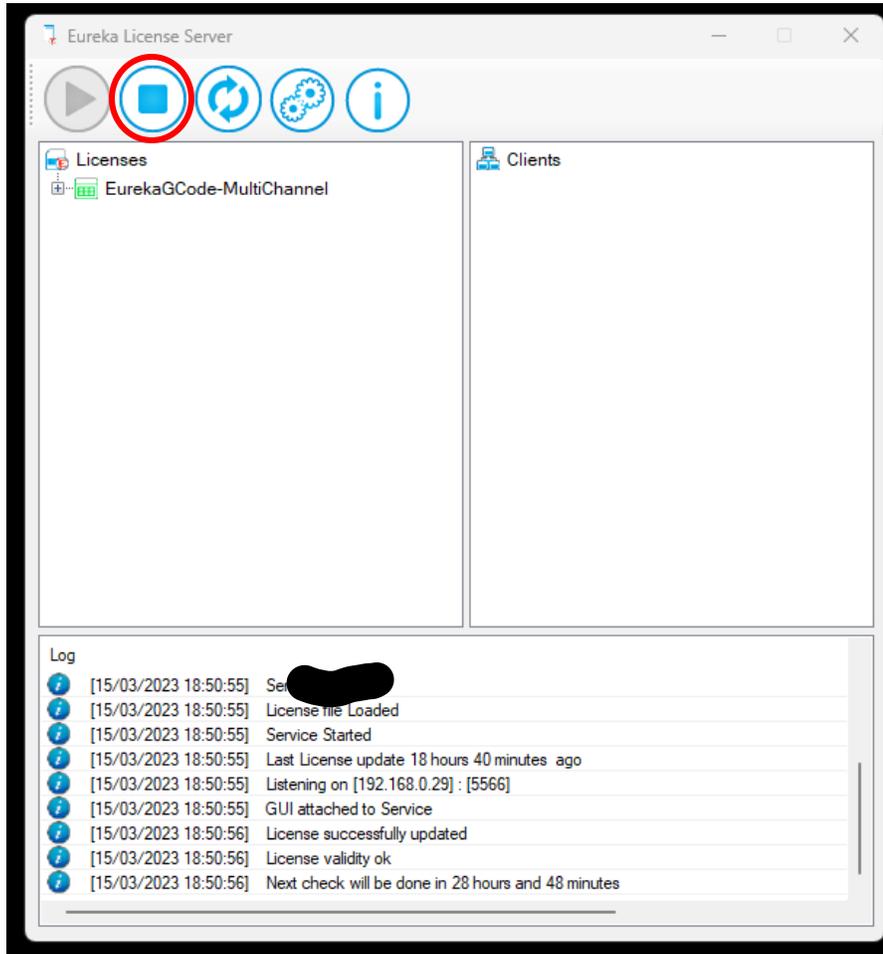


2. Put your new license in the Eureka License folder in the C drive.

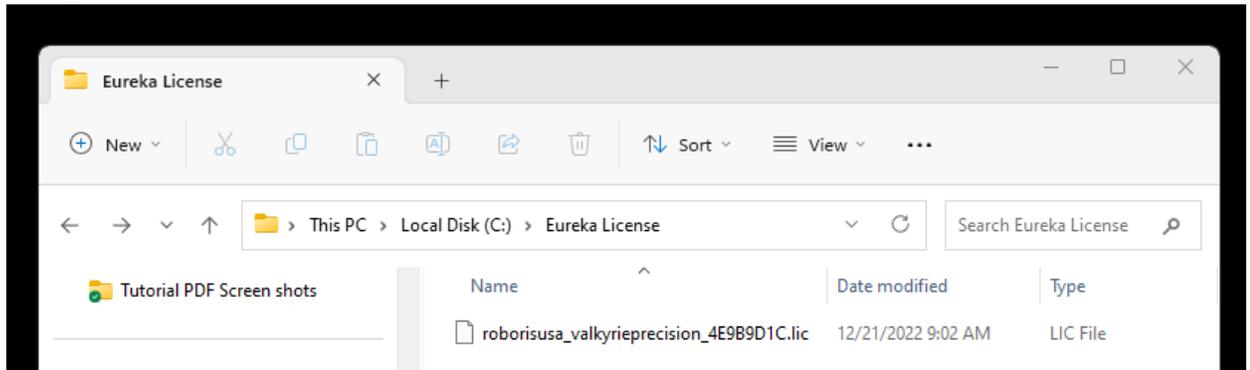

3. Click the Configuration button

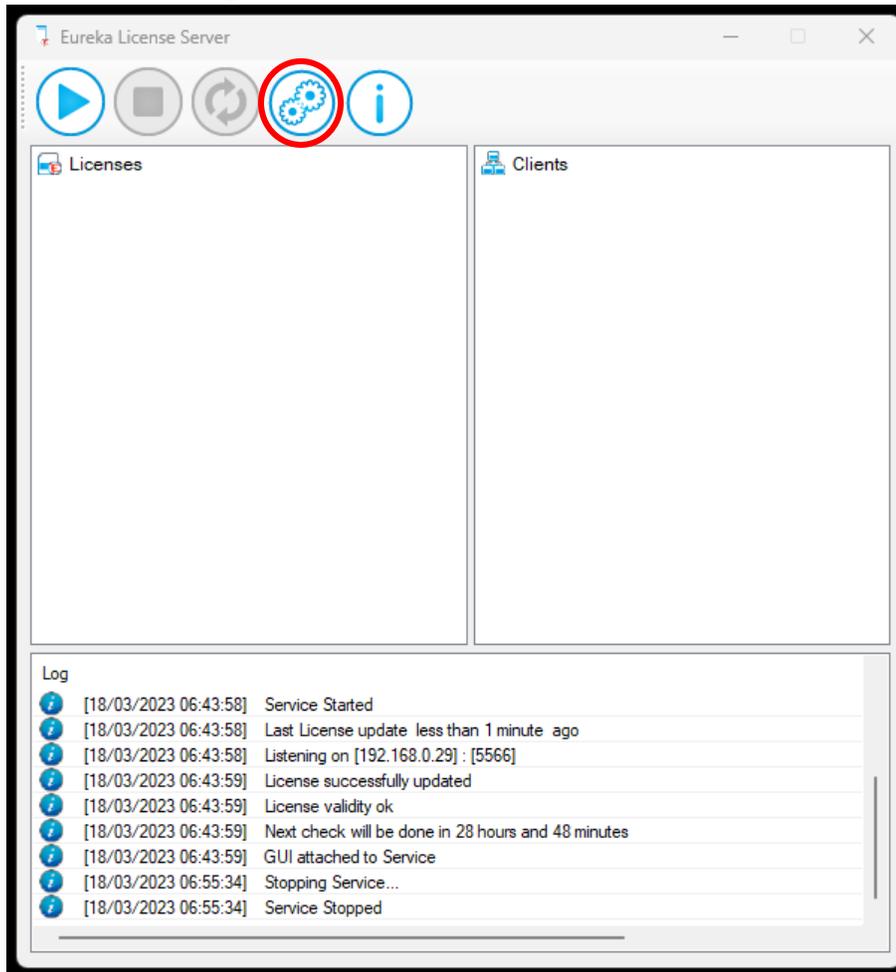

4. Click the “..” button and select your new license file. You will need to re-select the file even though the new file may have the same name as the old file.

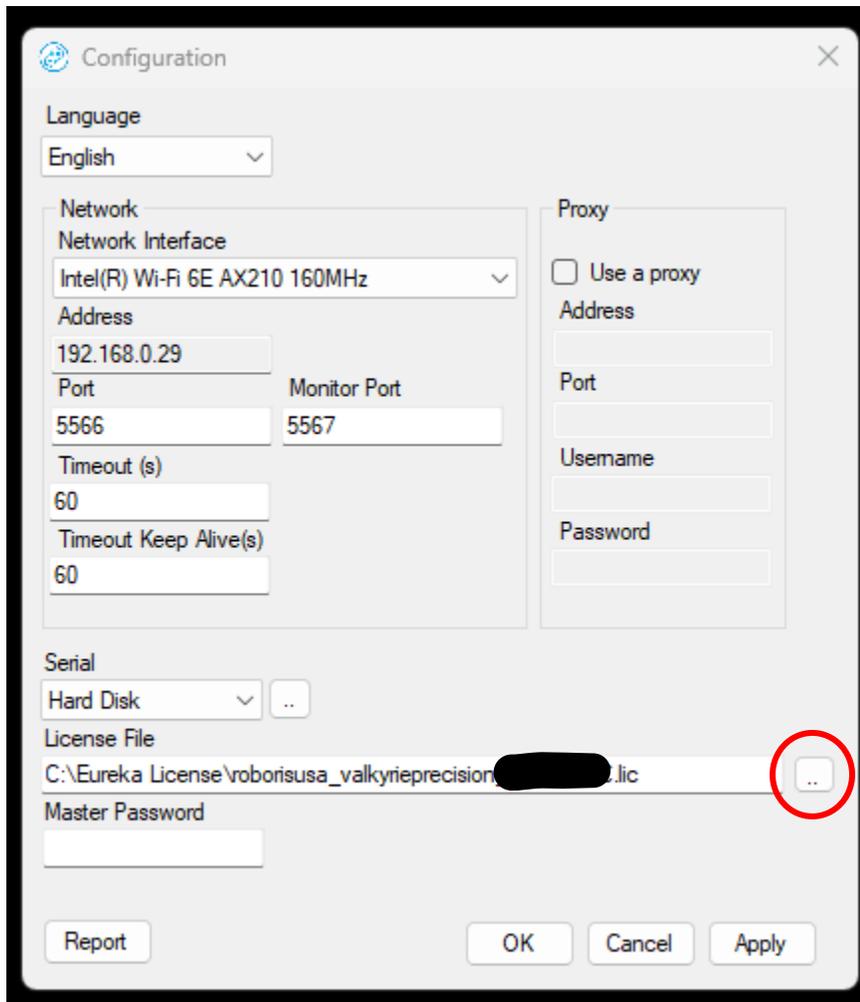

5. Restart the service and run Eureka normally.